 


# Life Cycle LC9500HR - LC95-0XXX-10

## General Assembly

---

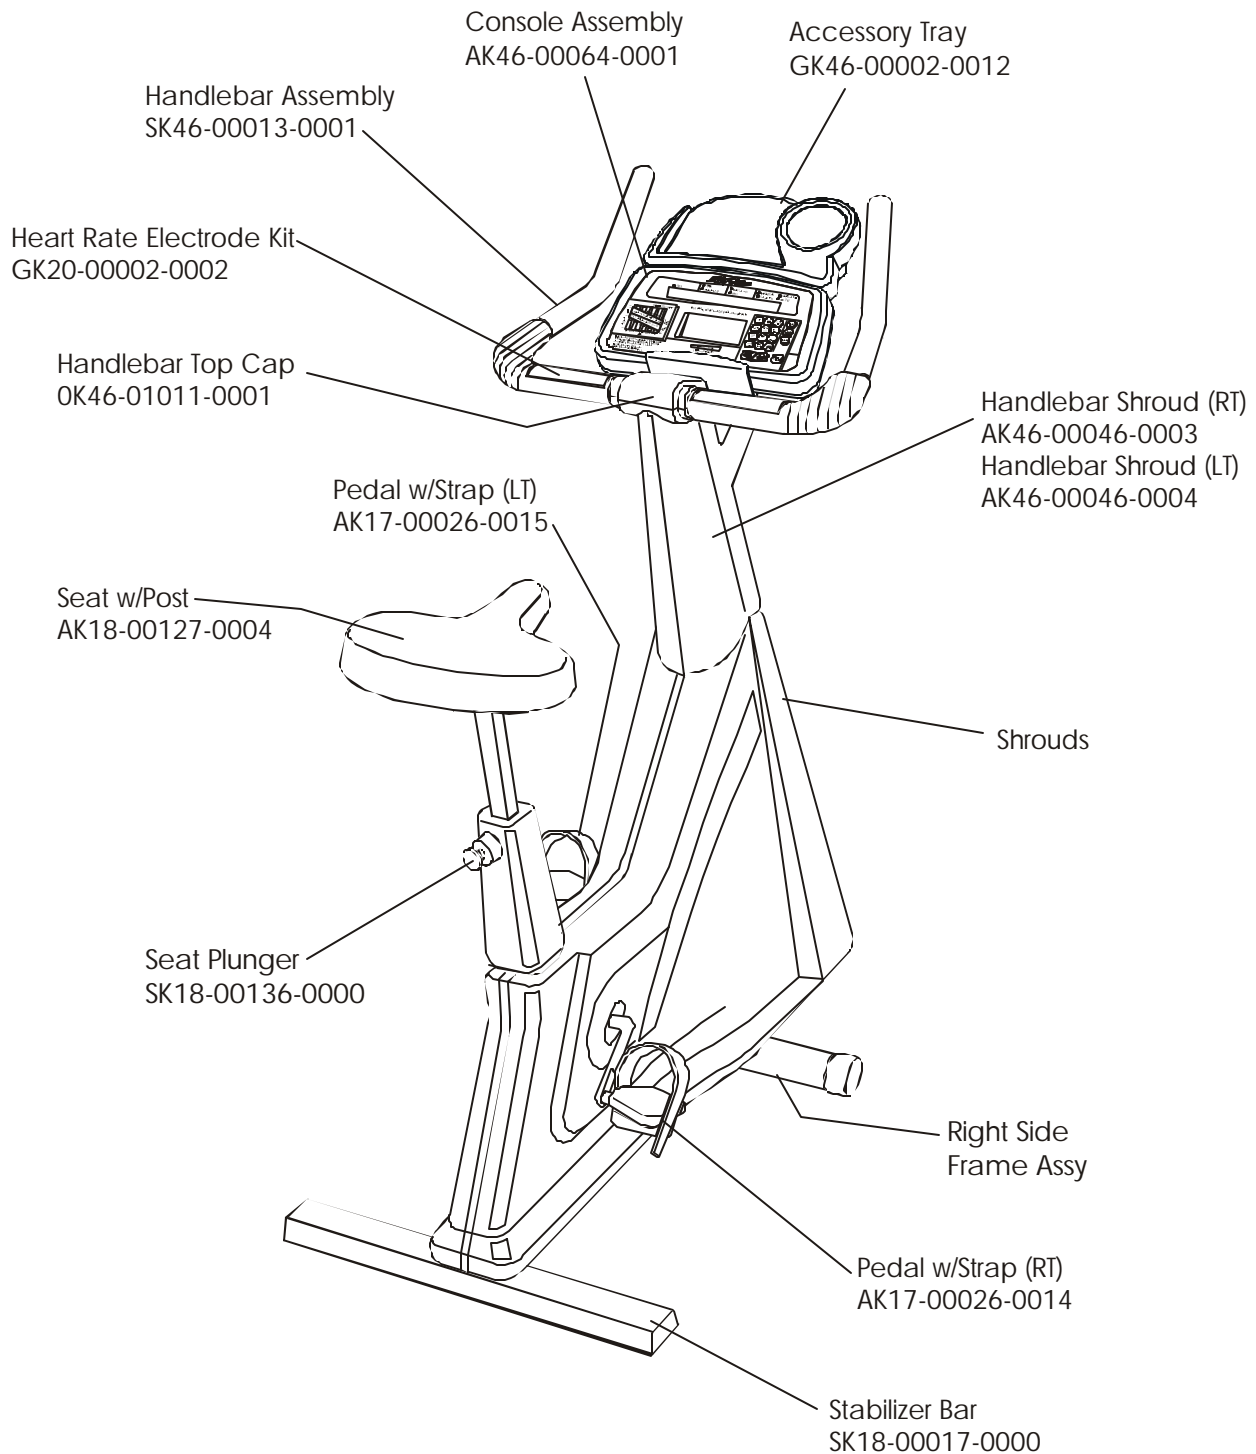 


NOTE: Installation Instructions MO51-00K20-A287,  
Operator Manual M051-00K20-B125,  
Service Manual M051-00K46-B004,  
and Hardware Kit AK46-00065-0000.

# Life Cycle LC9500HR - LC95-0XXX-10

## Right Side Frame


---

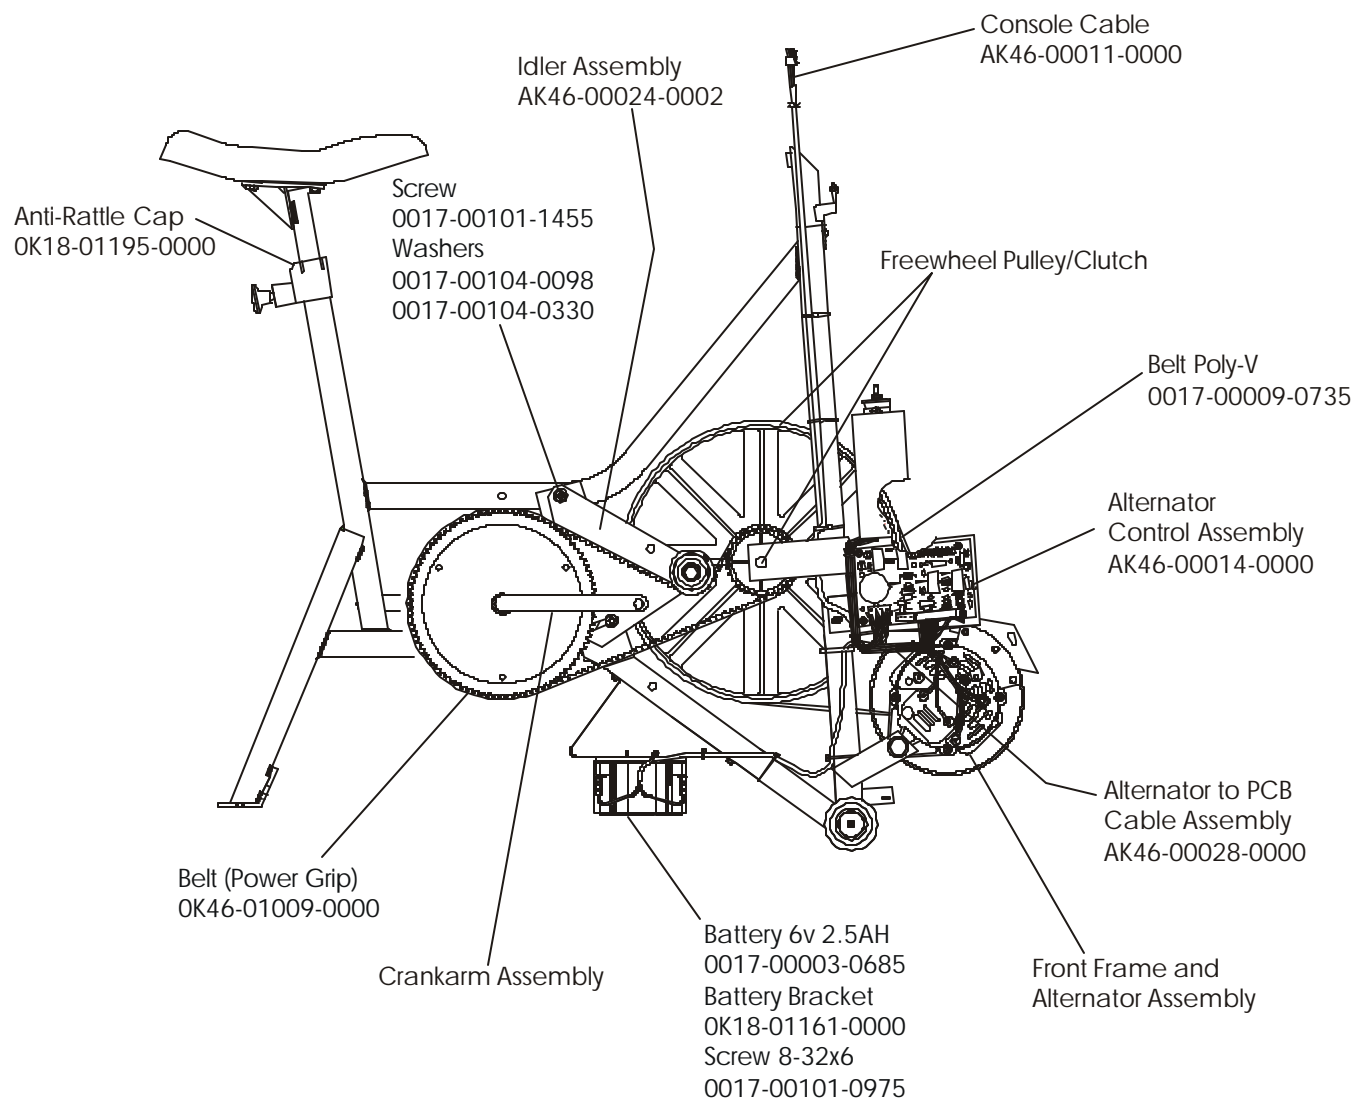

## Life Cycle LC9500HR - LC95-0XXX-10

### Shrouds/Stabilizer Bar

 
---

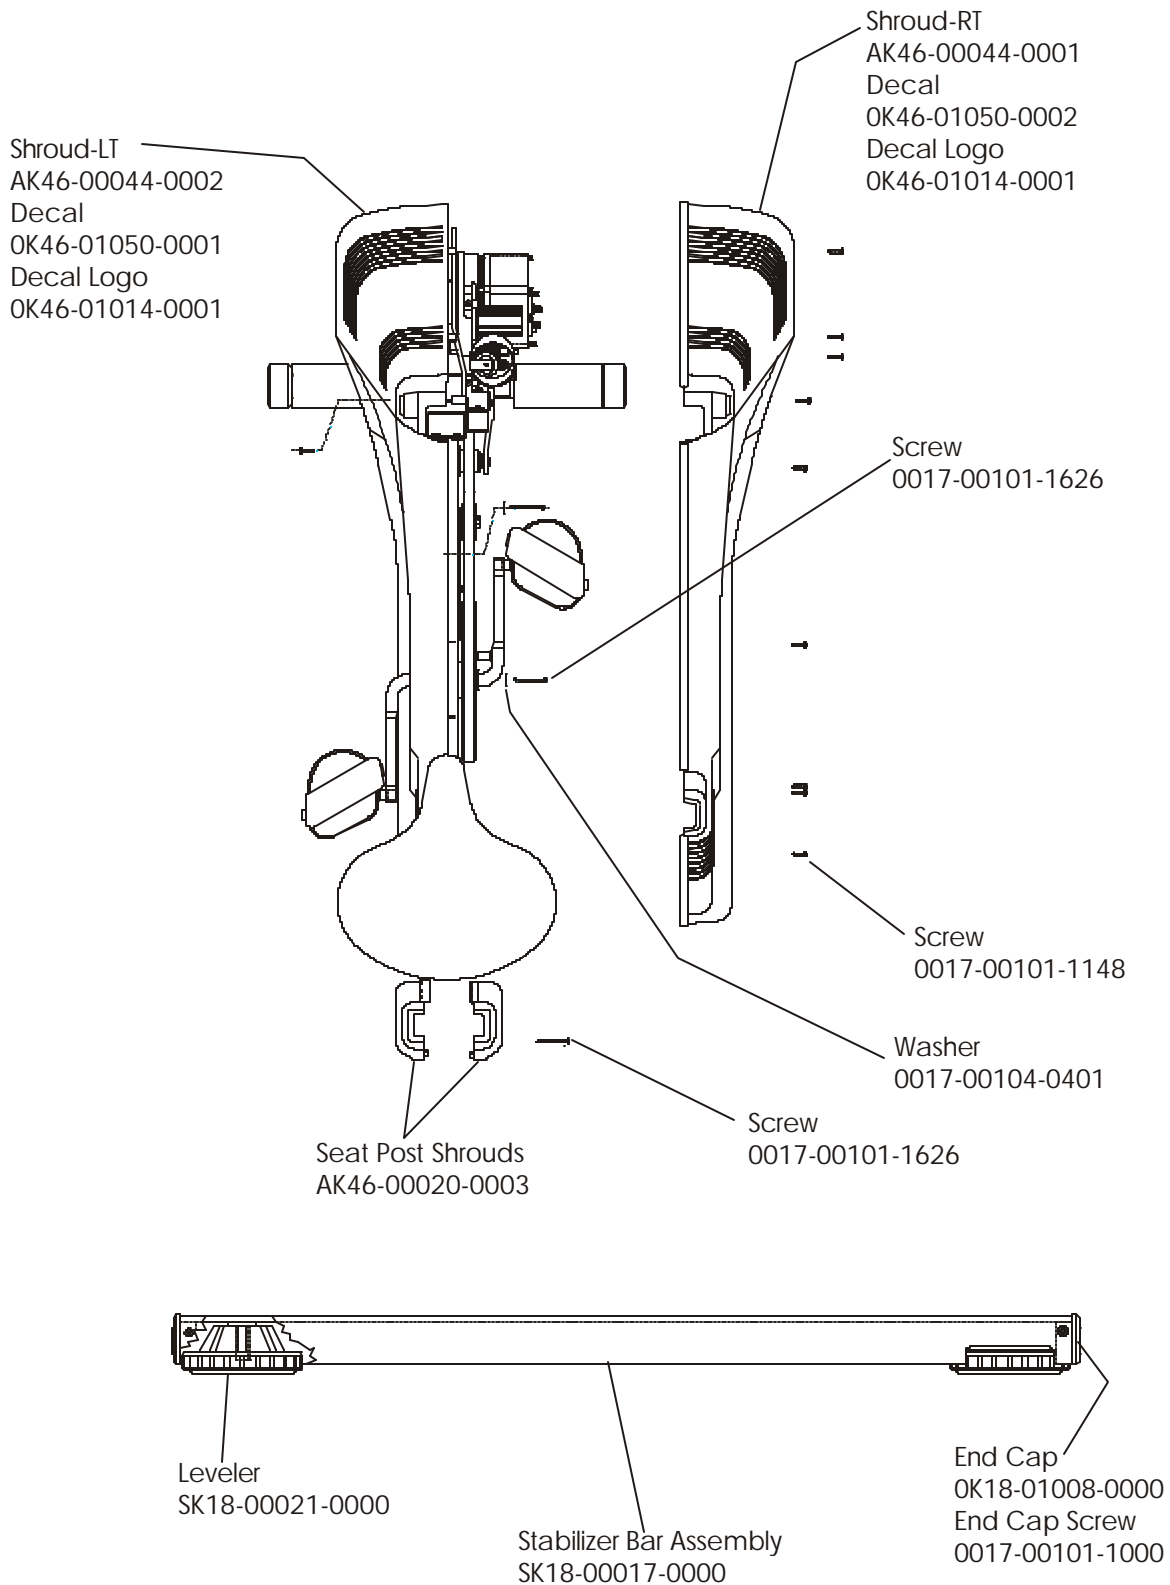

# Life Cycle LC9500HR - LC95-0XXX-10

## Front Frame Assembly

 ---

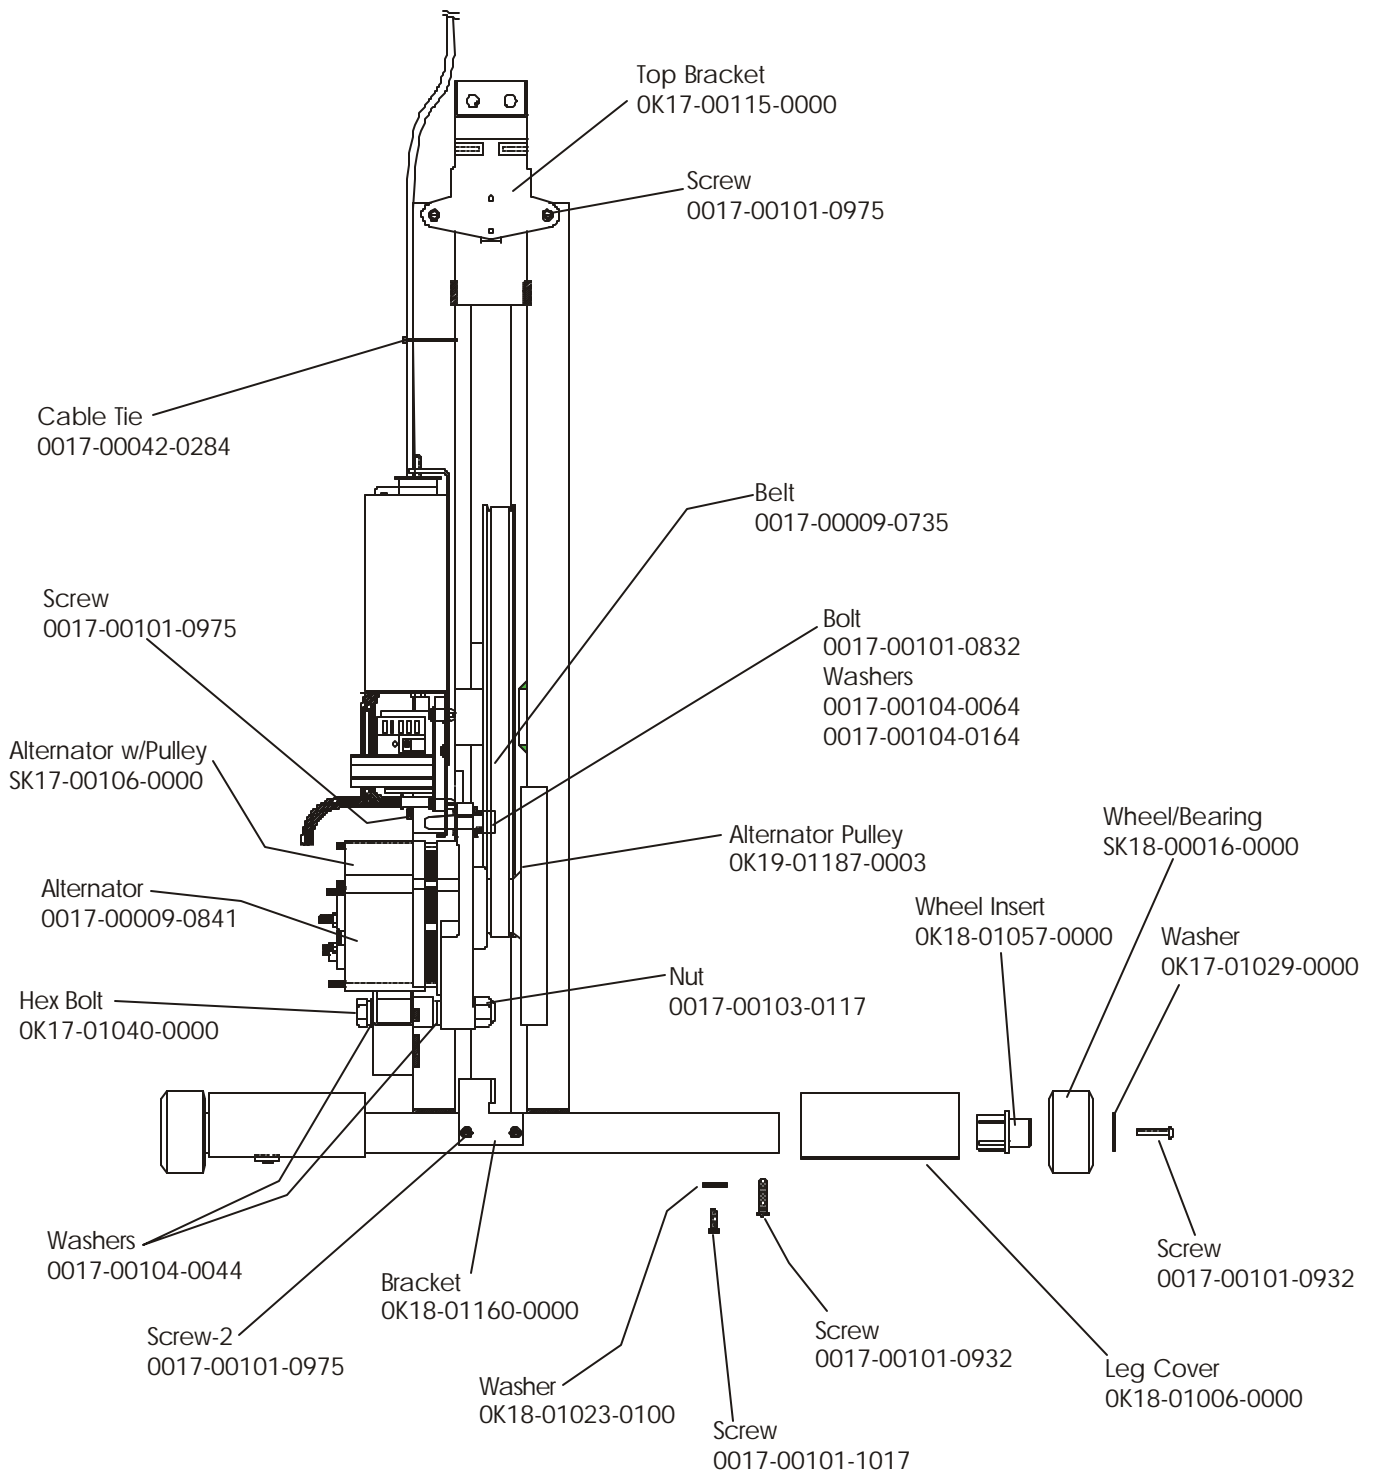

## Life Cycle LC9500HR - LC95-0XXX-10

### Console Assembly



---

#### Console Assembly

AK46-00064-0001 Eng/Met  
 AK46-00064-0003 Ger/Eur  
 AK46-00064-0004 Spn/Eur  
 AK46-00064-0005 Spn  
 AK46-00064-0006 Eng  
 AK46-00064-0007 Frn/Eur  
 AK46-00064-0008 Itl/Eur  
 AK46-00064-0009 Dut/Eur  
 AK46-00064-0010 Frn  
 AK46-00064-0011 Por


#### Overlay Bezel Assembly

  AK46-00047-0001 Eng/Met  
 AK46-00047-0003 Ger/Eur  
 AK46-00047-0004 Spn/Eur  
 AK46-00047-0005 Spn  
 AK46-00047-0006 Eng  
 AK46-00047-0007 Frn/Eur  
 AK46-00047-0008 Itl/Eur  
 AK46-00047-0009 Dut/Eur  
 AK46-00047-0010 Frn  
 AK46-00047-0011 Por

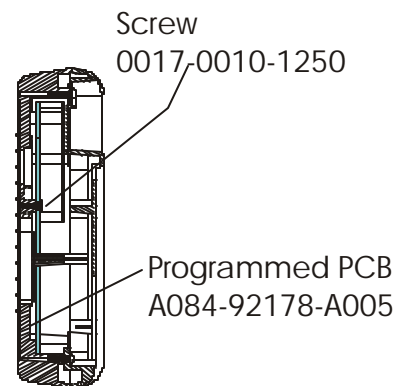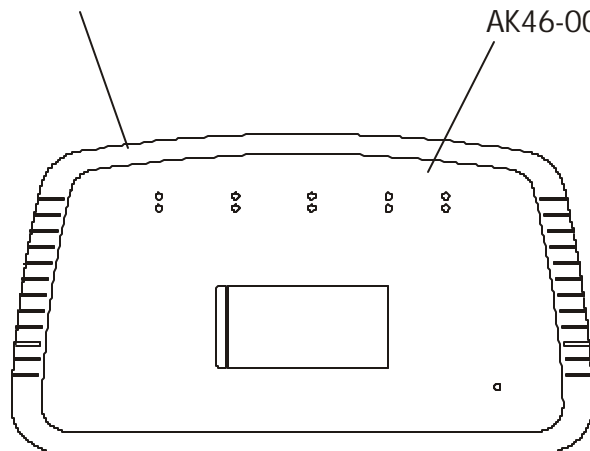

Console Case (Grey)  
 OK36-01187-0007

 Battery Cover  
 OK36-01035-0005

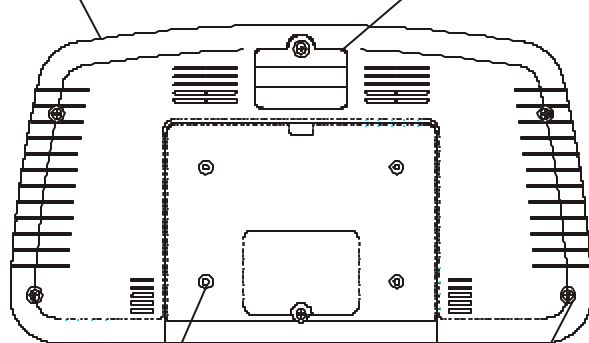


Screw  
 0017-00101-1104

Screw  
 0017-00101-0823

**Life Cycle LC9500HR - LC95-0XXX-10**  
**Accessory Tray**

 
---

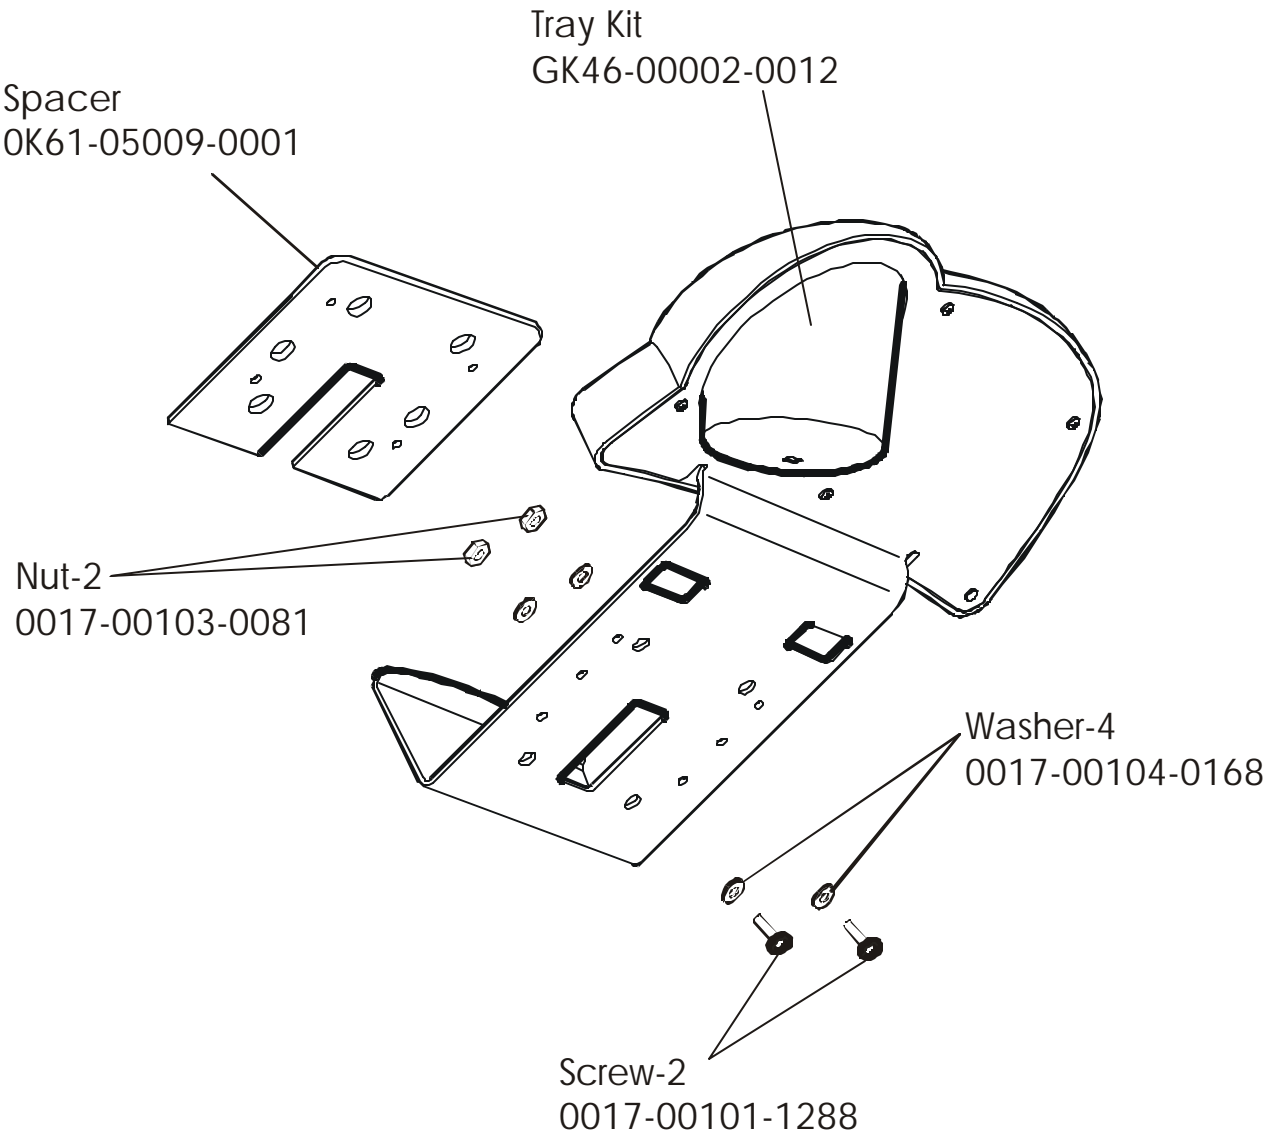

# Life Cycle LC9500HR - LC95-0XXX-10

## Handlebar Assembly

 
---

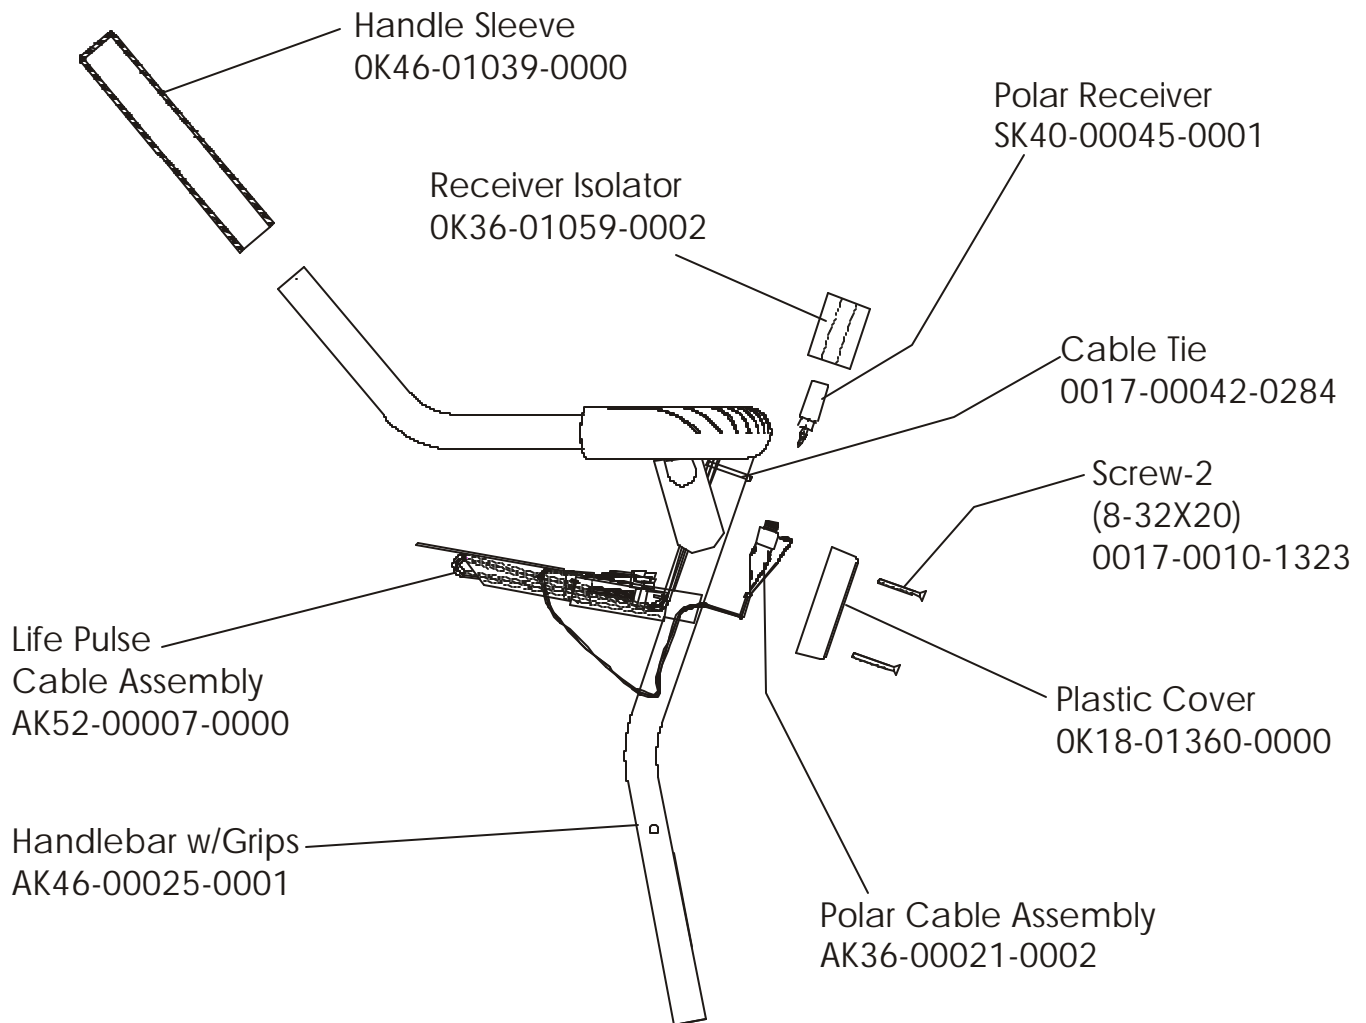

## Life Cycle LC9500HR - LC95-0XXX-10

### Crankarm Assembly

 ---

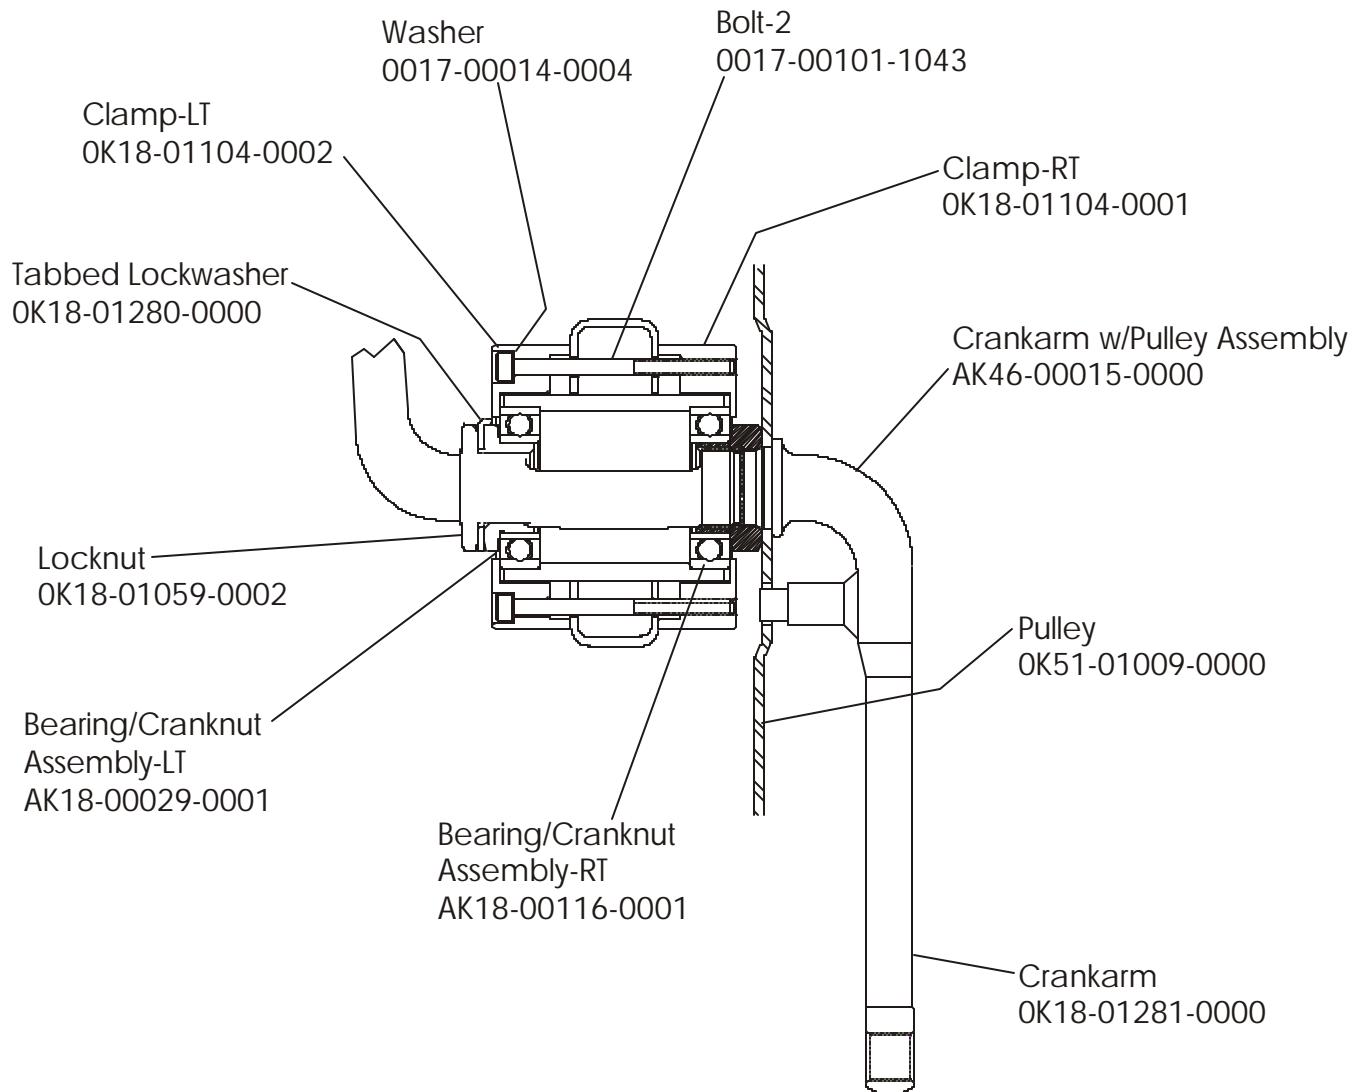


Note: Bearing Kit Number GK18-00004-0023




**Life Cycle LC9500HR - LC95-0XXX-10**  
**Freewheel Pulley/Clutch Assembly**

 ---

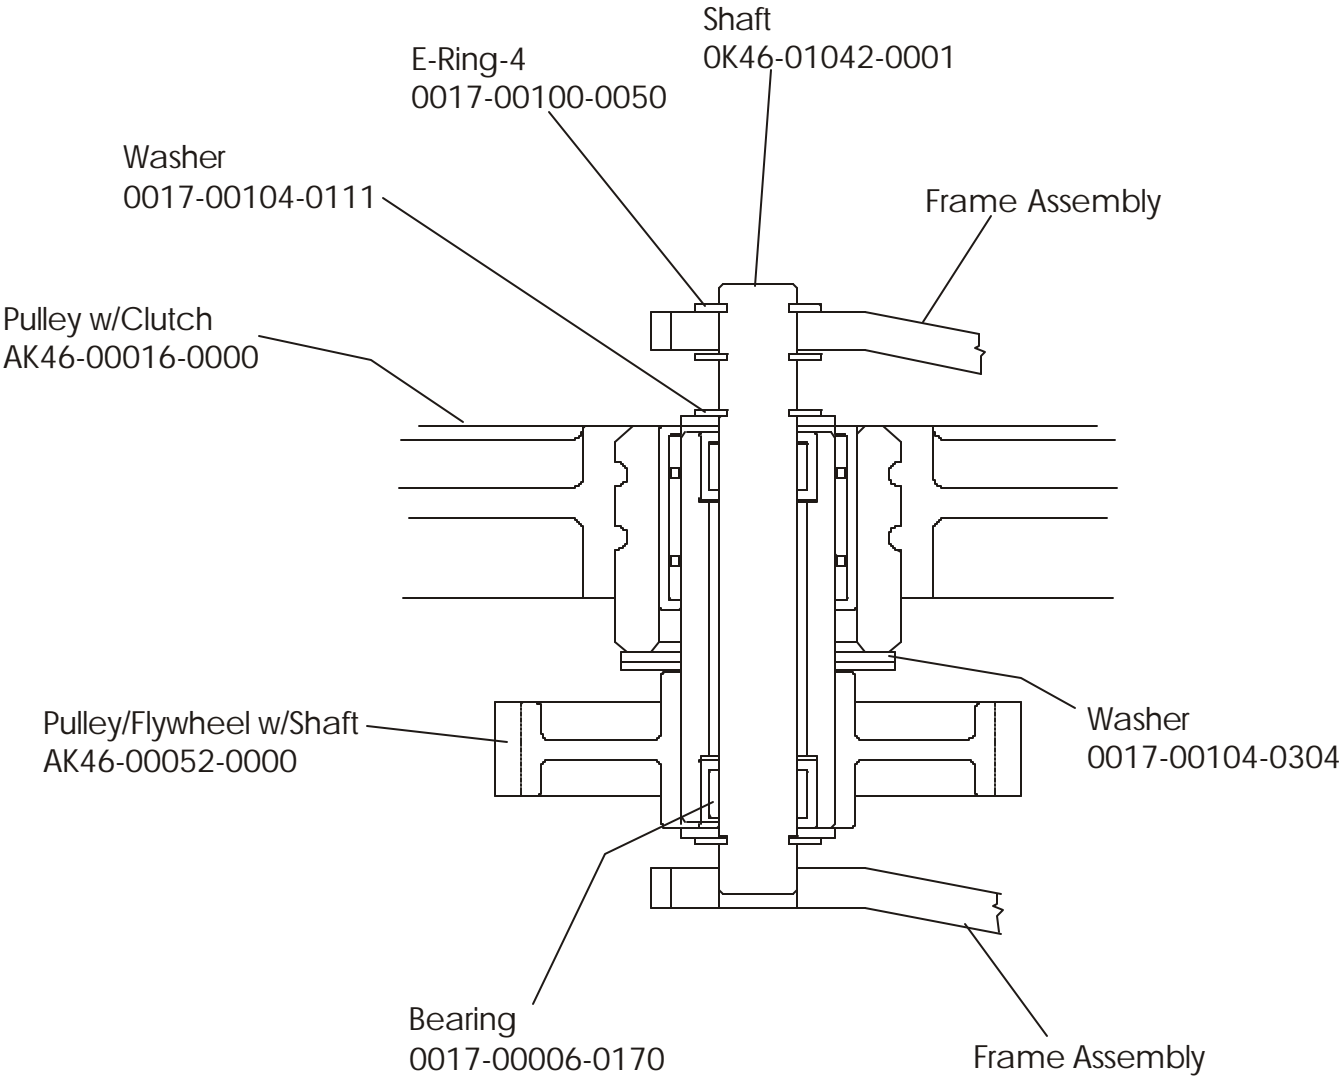


**Life Cycle LC9500HR - LC95-0XXX-10**  
**Idler Arm Assembly - AK46-00024-0002**

 ---

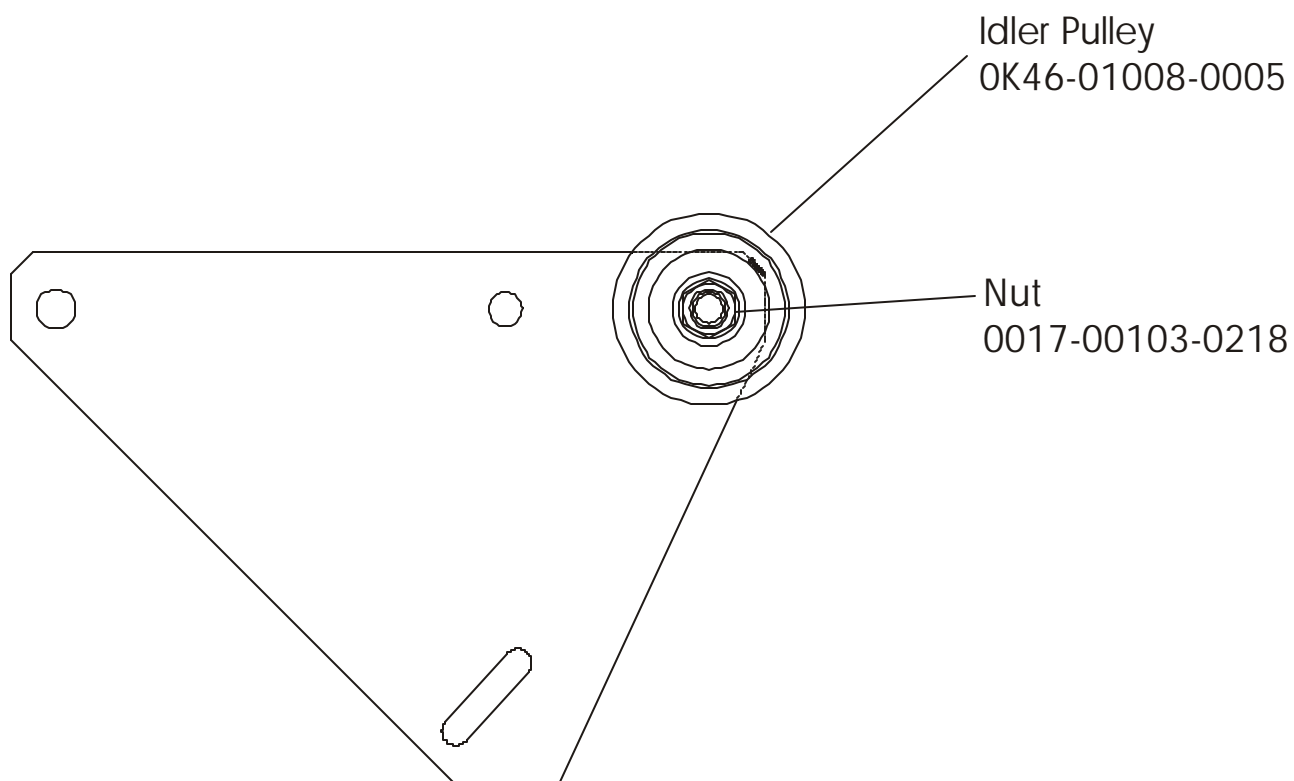

**Life Cycle LC9500HR - LC95-0XXX-10**  
**Seat/Seat Post Assembly - AK18-00127-0004**

 ---

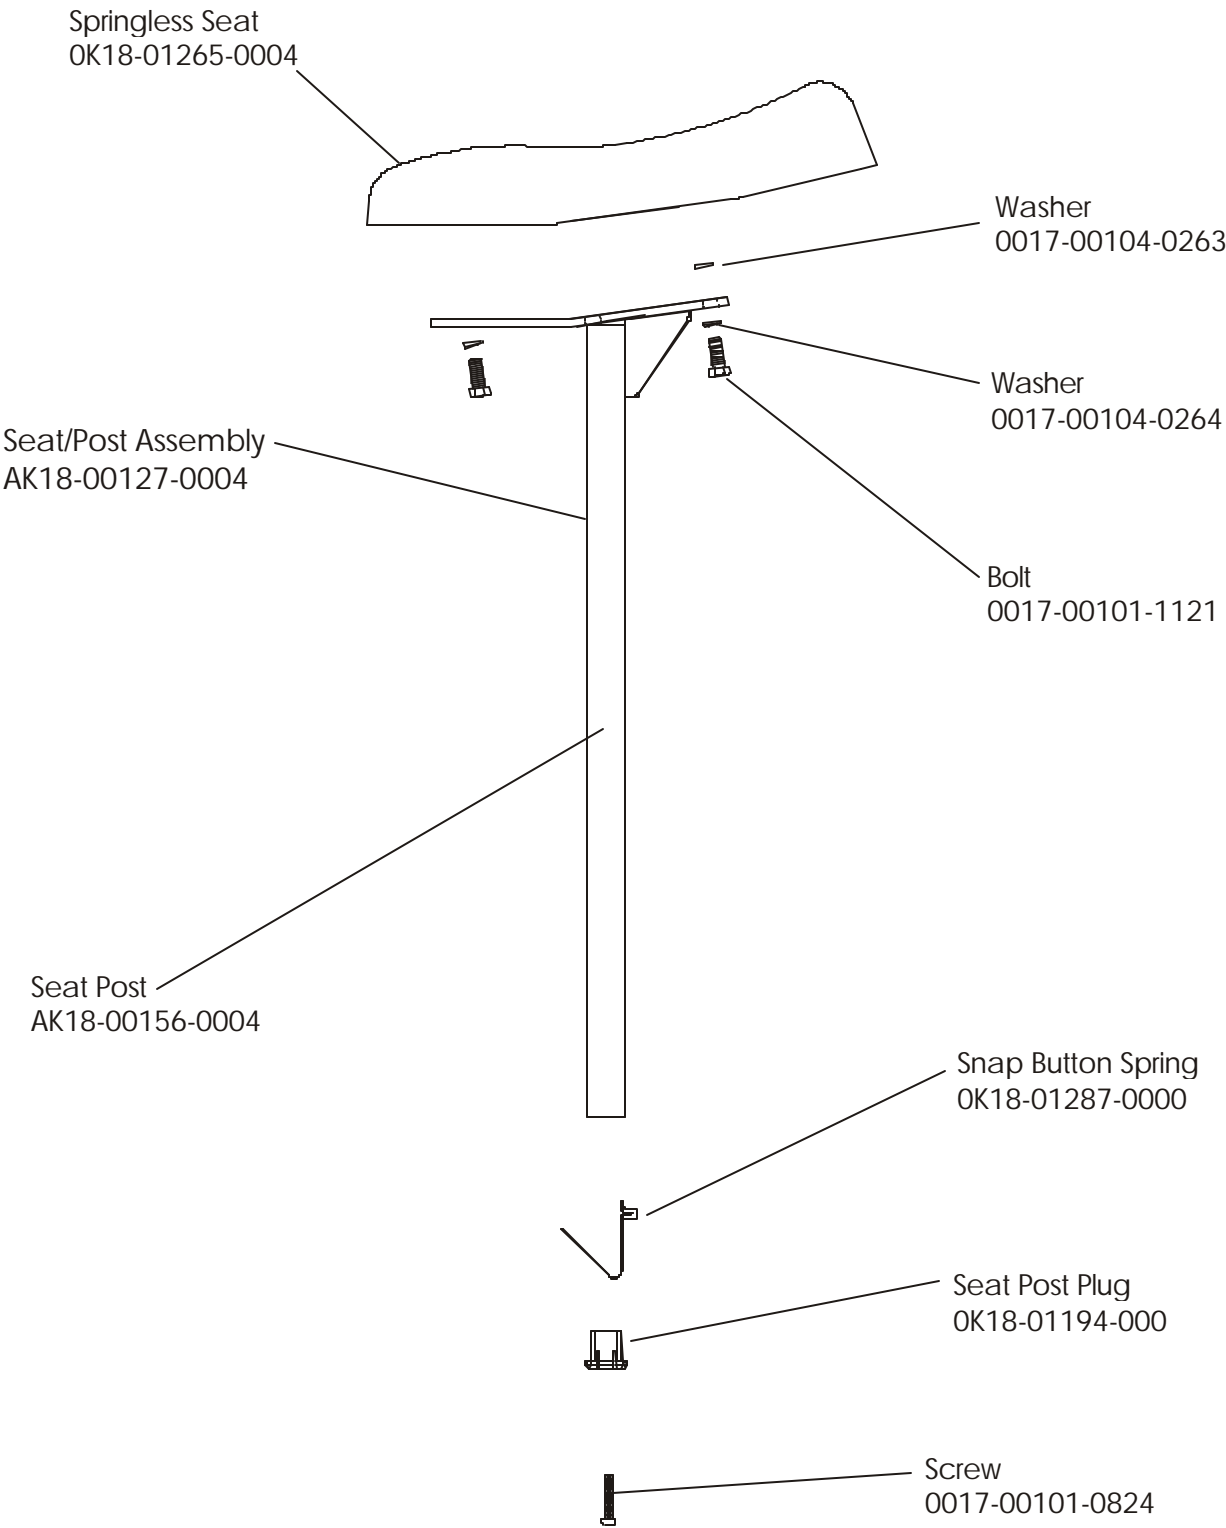

**Life Cycle LC9500HR - LC95-0XXX-10**  
**Seat Plunger Assembly - SK18-00136-0000**

---

Seat Knob

OK14-01150-0000

Seat Pin Bearing

OK14-01288-0000

Bearing

0017-00100-0149

Seat Pin

OK18-01306-0000

Bearing

0017-00100-0142

Spring


OK14-01153-0002

Washer

0017-00104-0232

Washer

 OK18-01254-0000

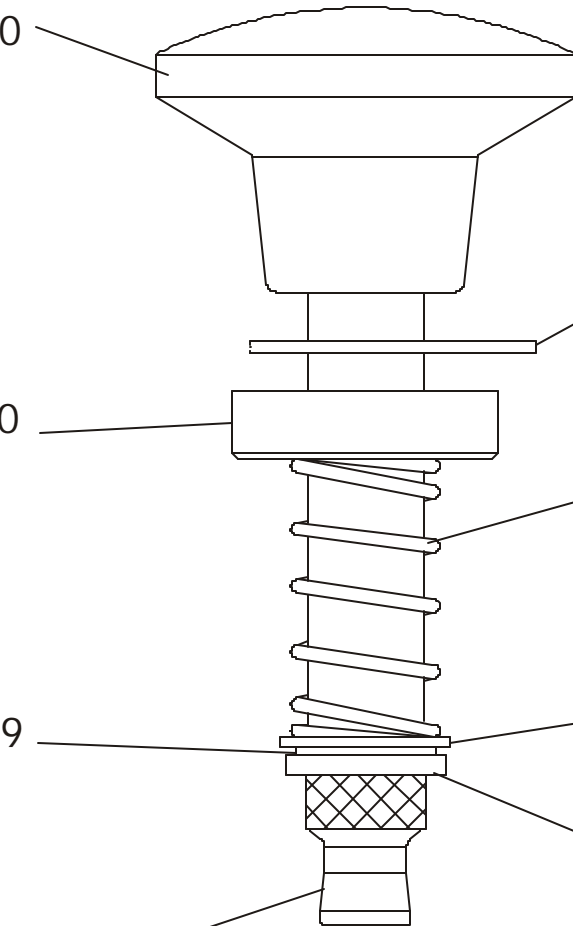

**Life Cycle LC9500HR - LC95-0XXX-10**  
**Alternator Control Assembly - AK46-00014-0000**

---

